

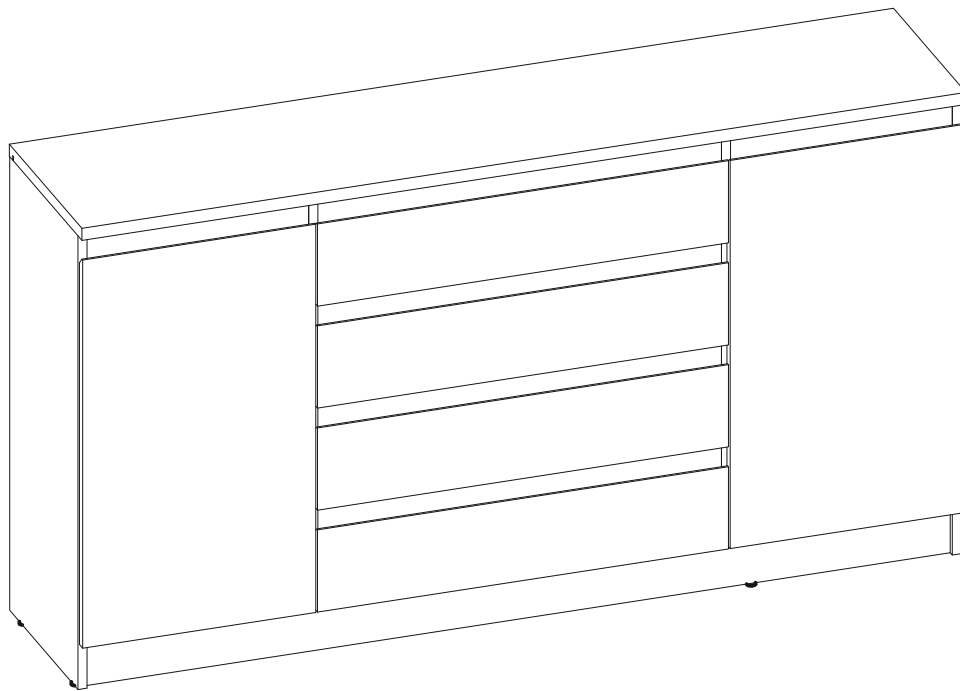
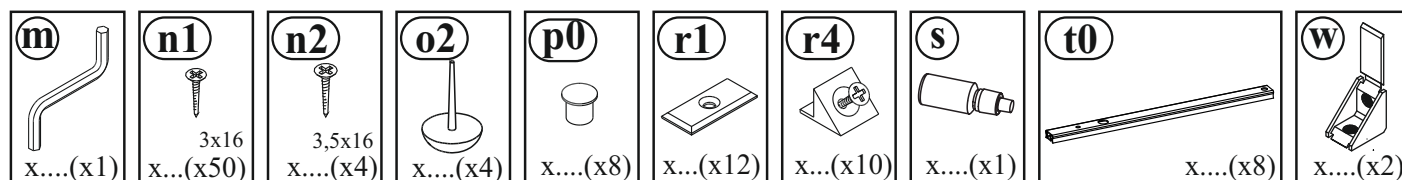
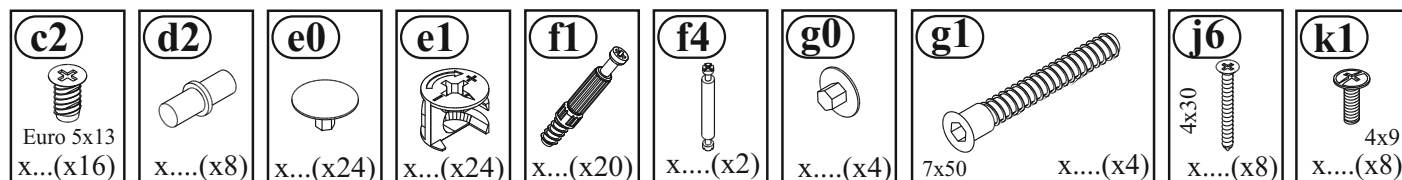


INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITÍ / MONTÁŽNÍ INSTRUKCE
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

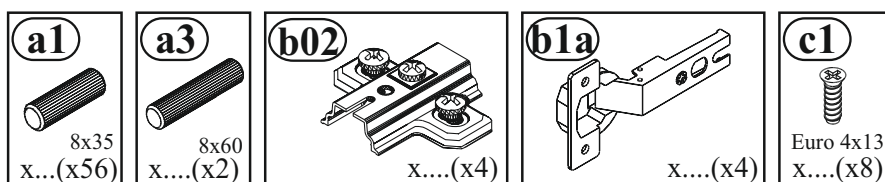


OKUCIA SĄ W PACZCE NR 1. / KOVANIE KTORÉ SA NÁCHADZA V SKRINKE NR 1.
KOVÁNÍ OBSAŽENÉ V BALENÍ NR 1. / ФУРНИТУРА, НАХОДЯЩАЯСЯ В УПАКОВКЕ NR 1.
A CSOMAGBAN TALÁLHATÓ BÚTORSZERELVÉNYEK NR 1.













INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITIE / MONTÁŽNÍ INSTRUKCE ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

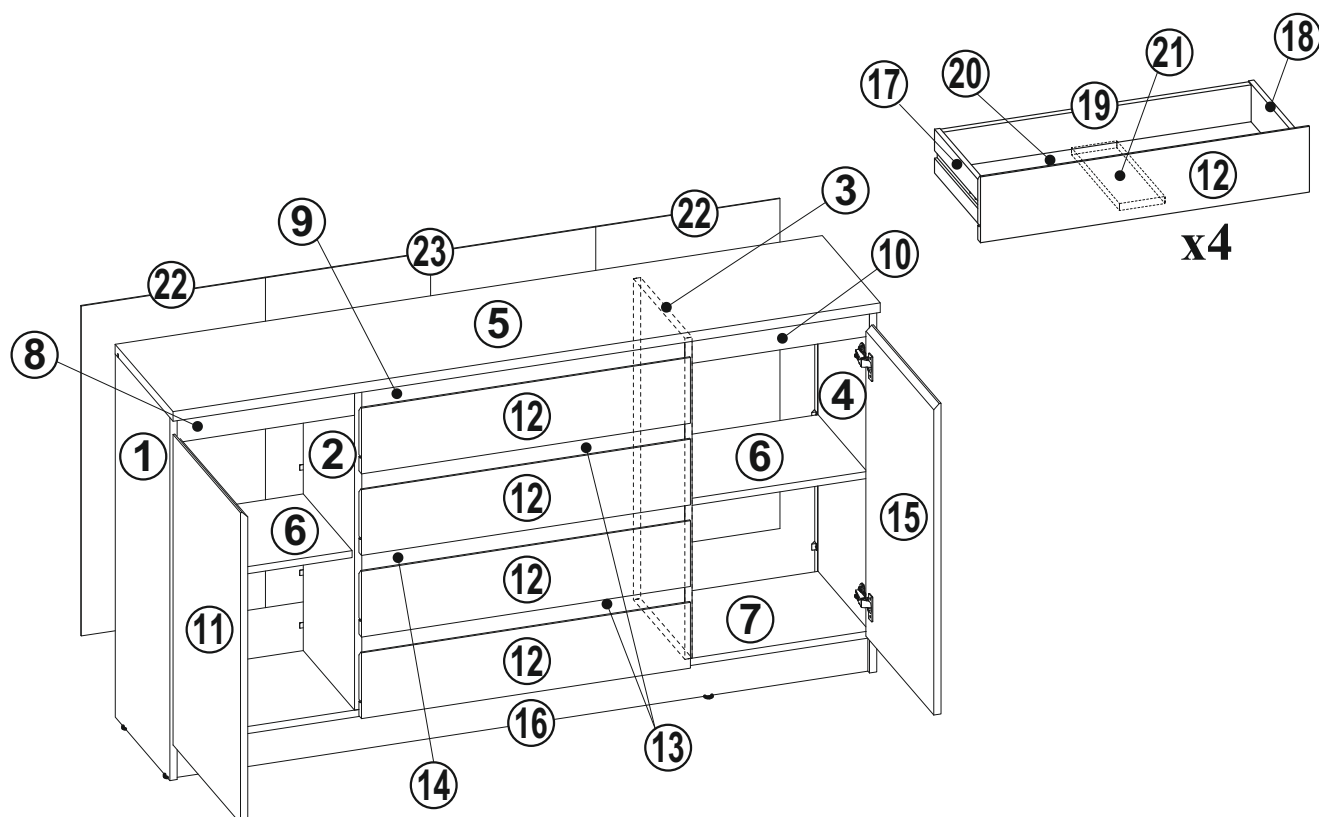





1

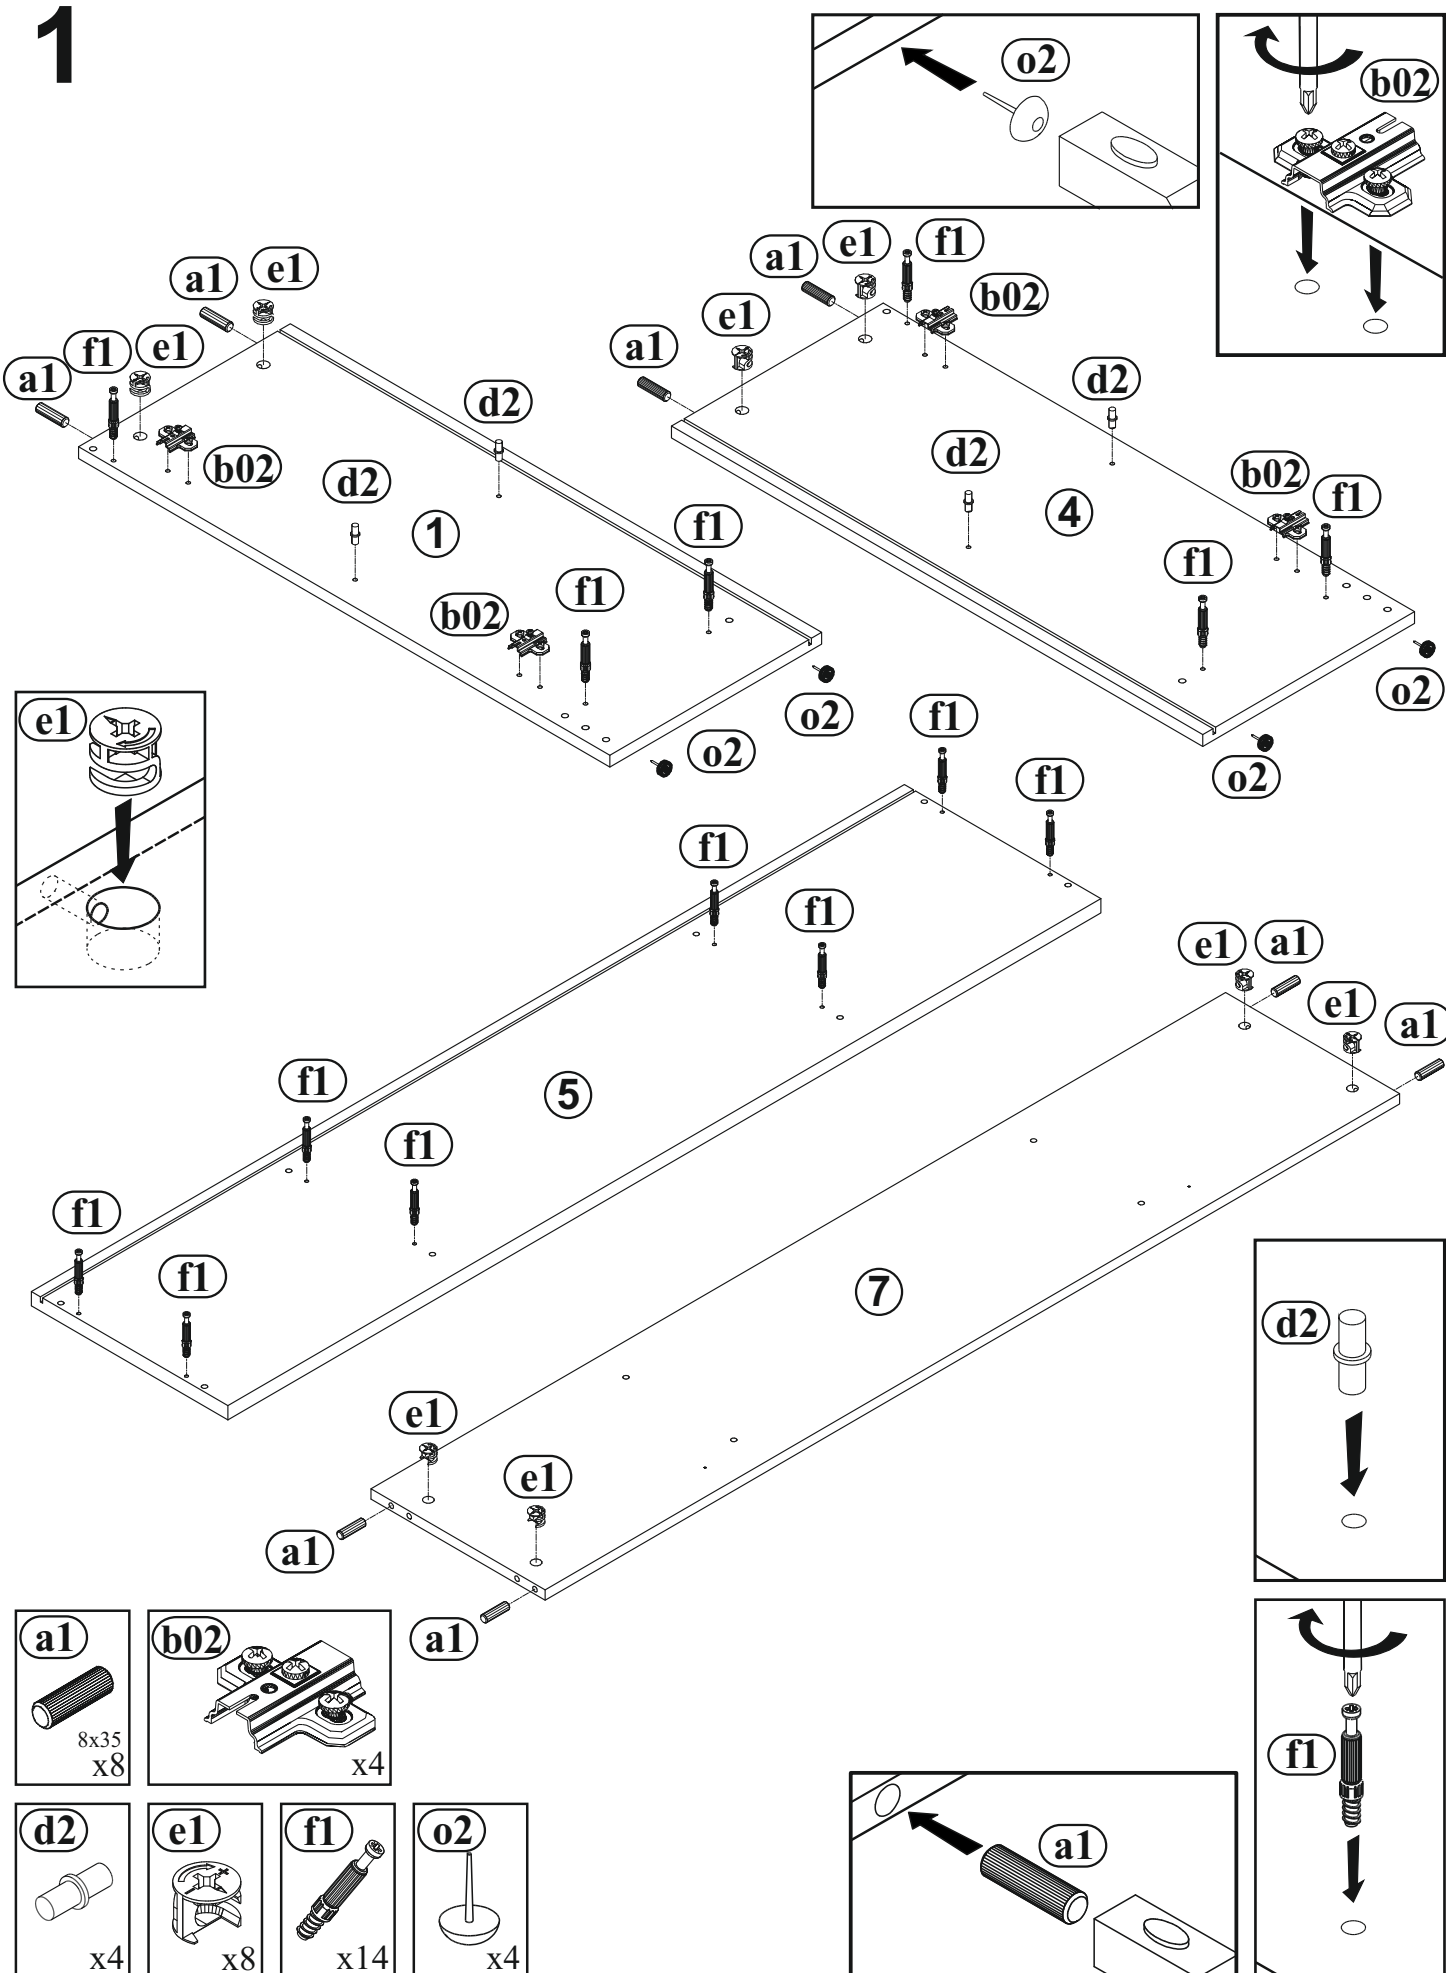




2

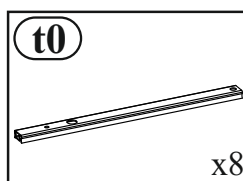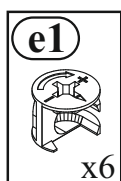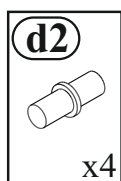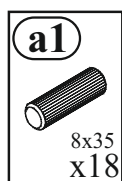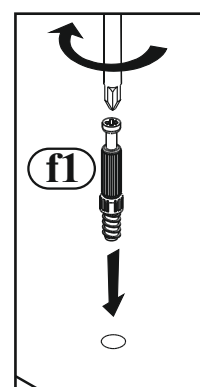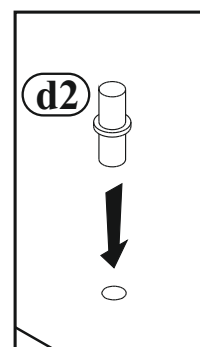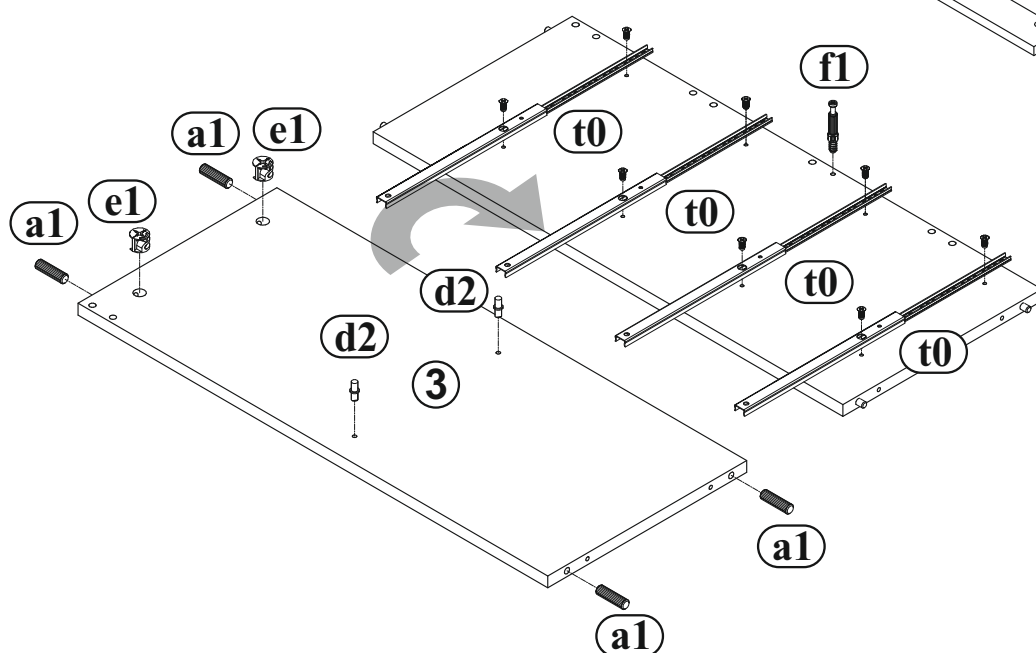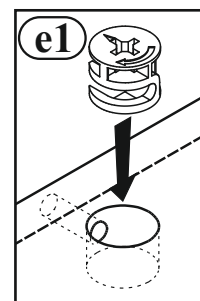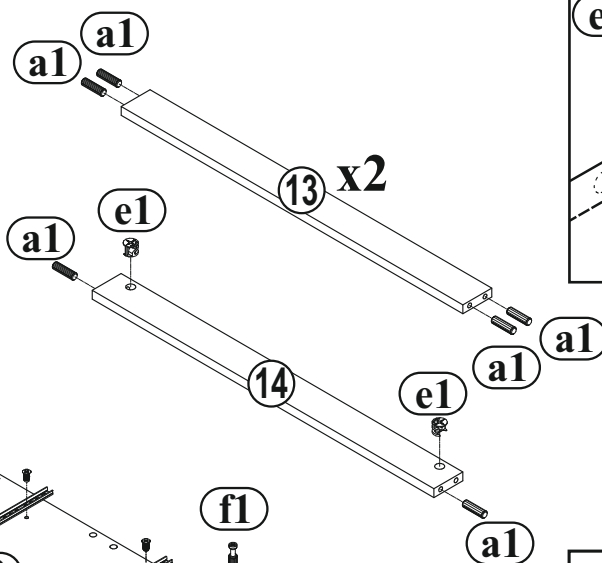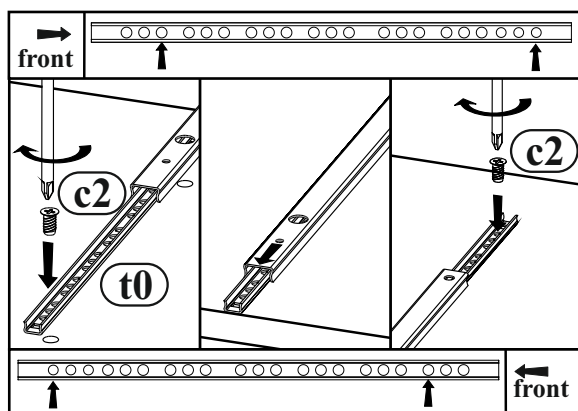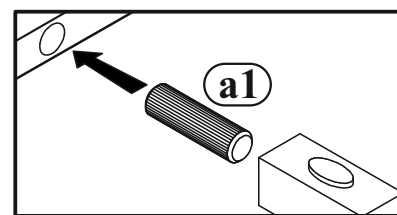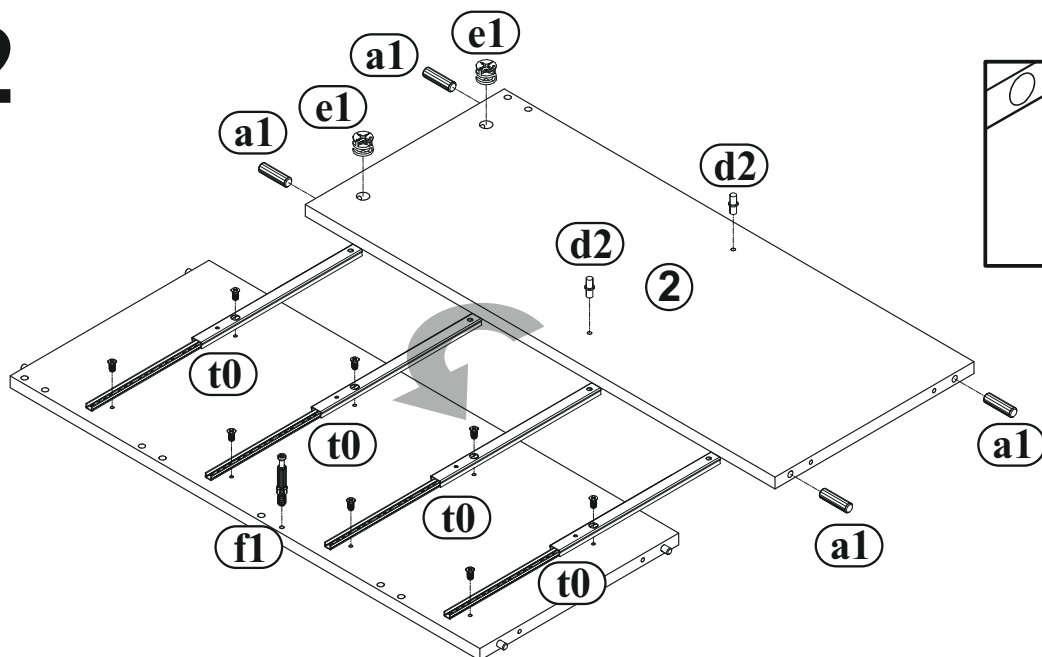


3

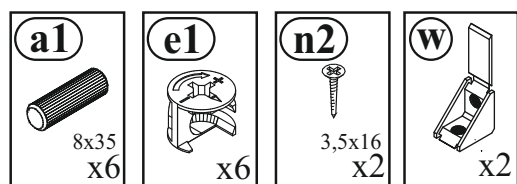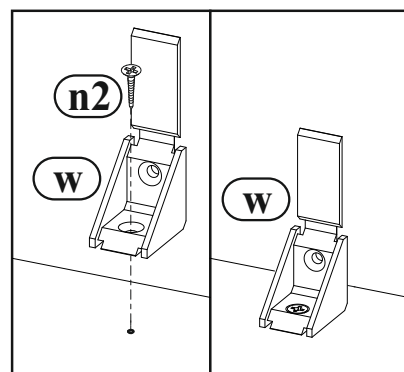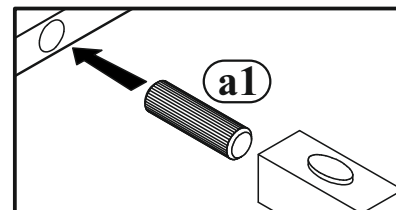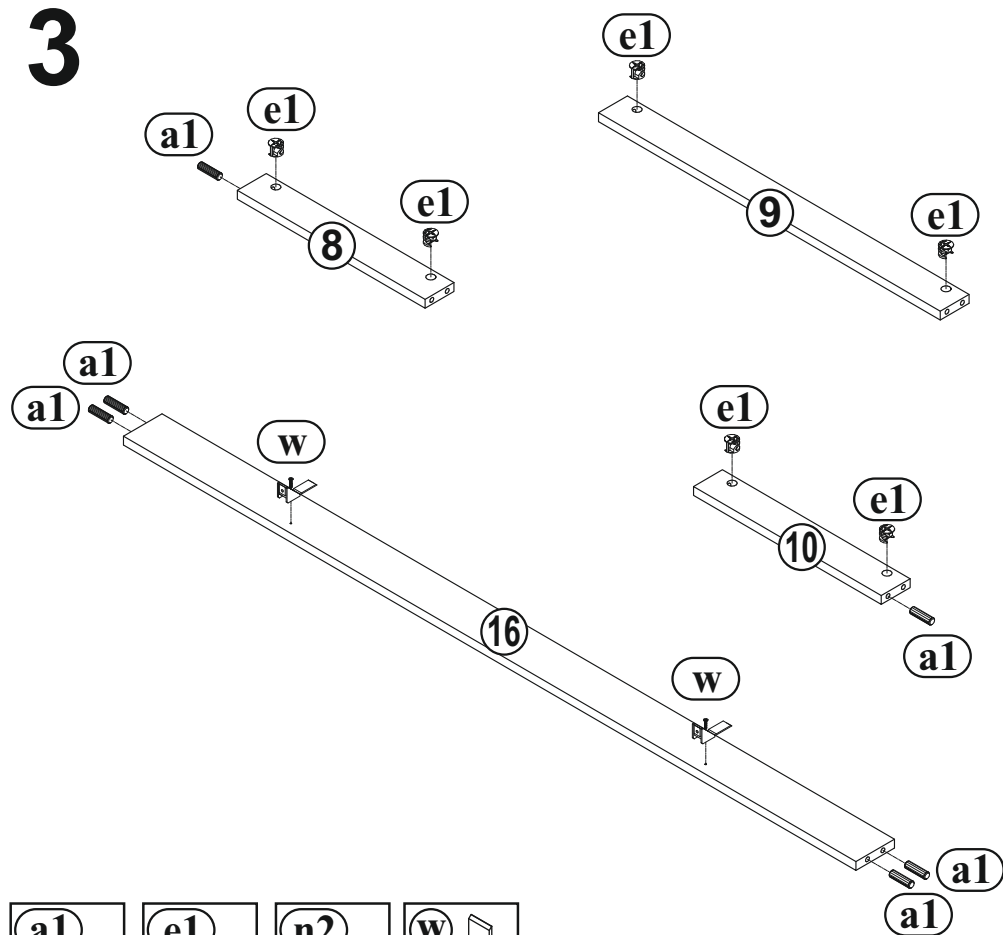


4

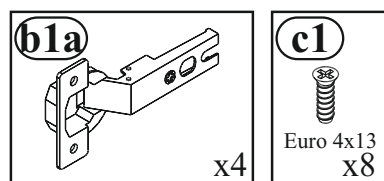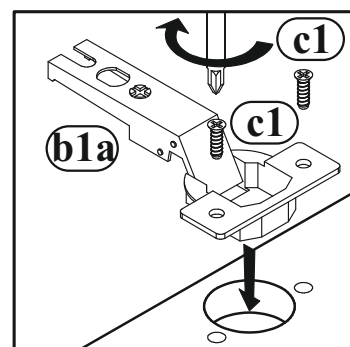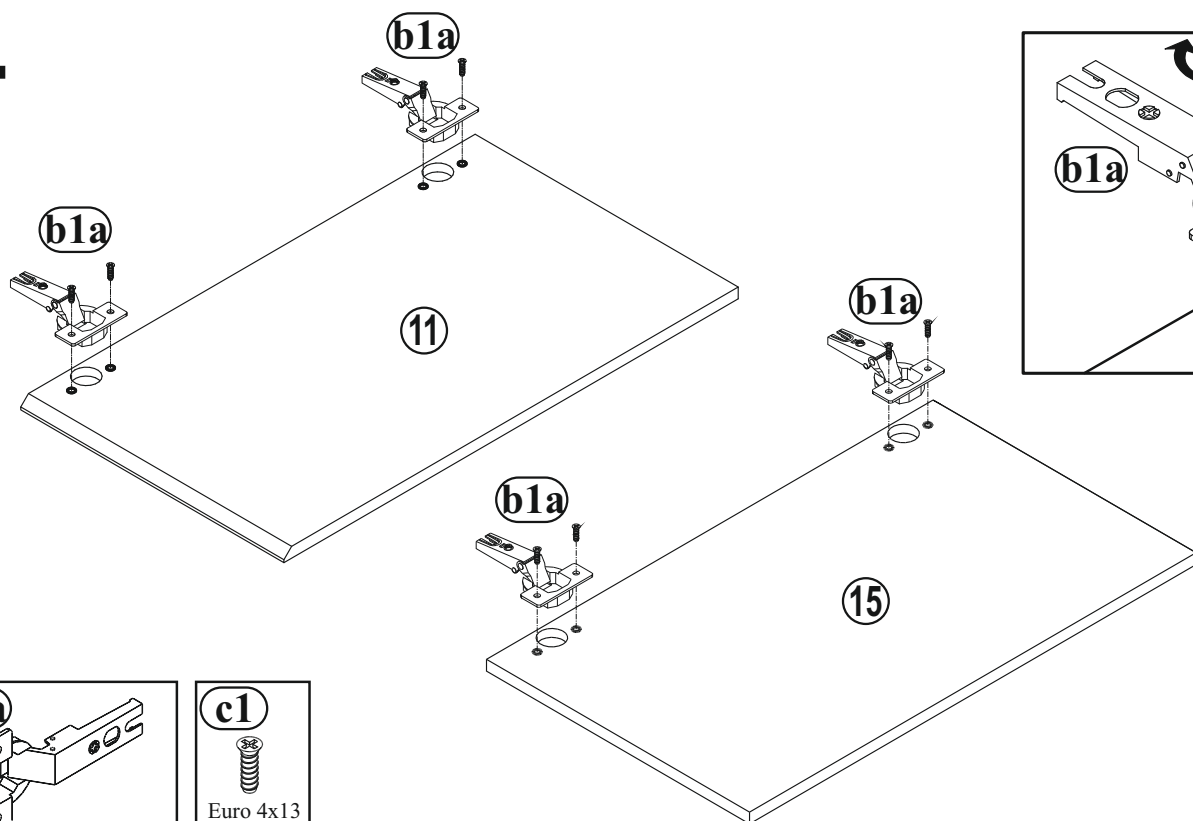


5

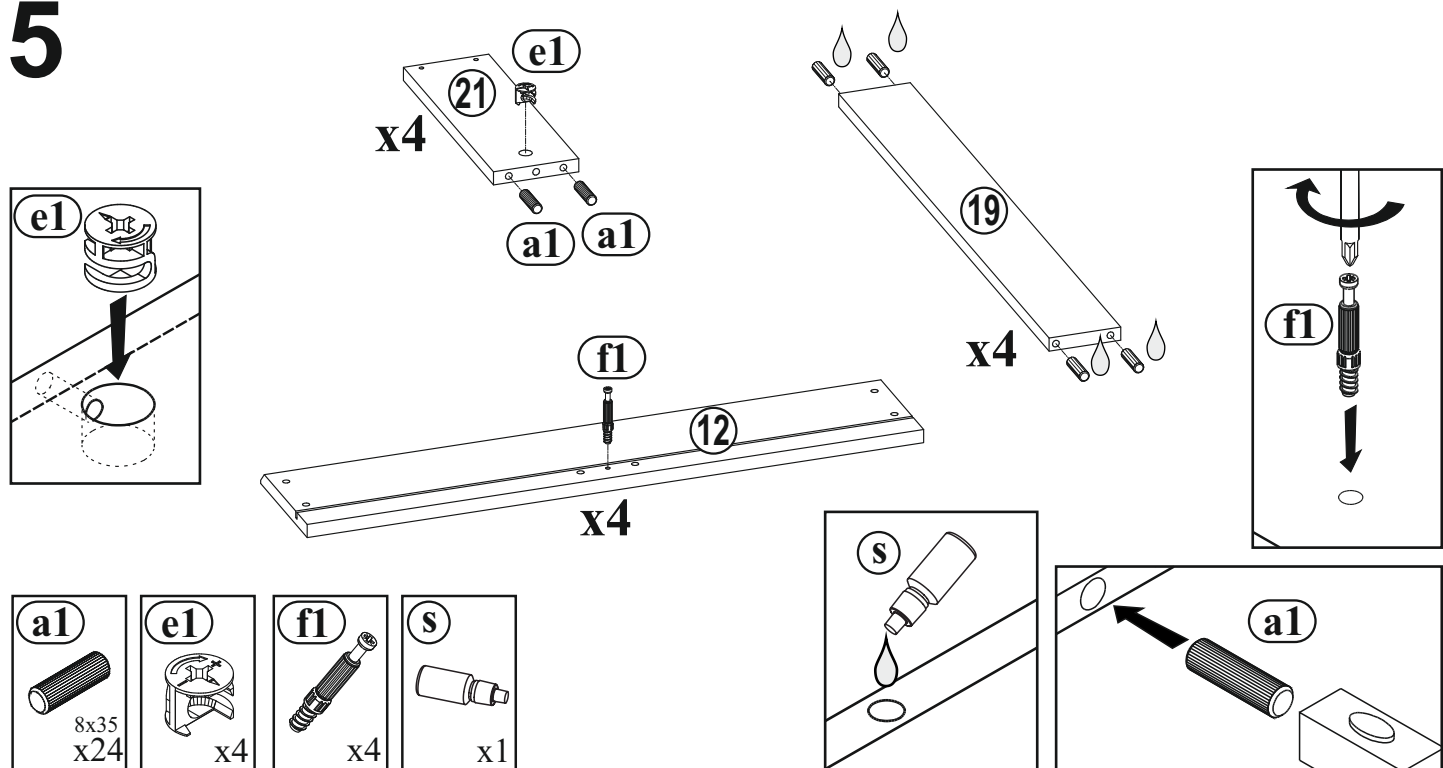


6

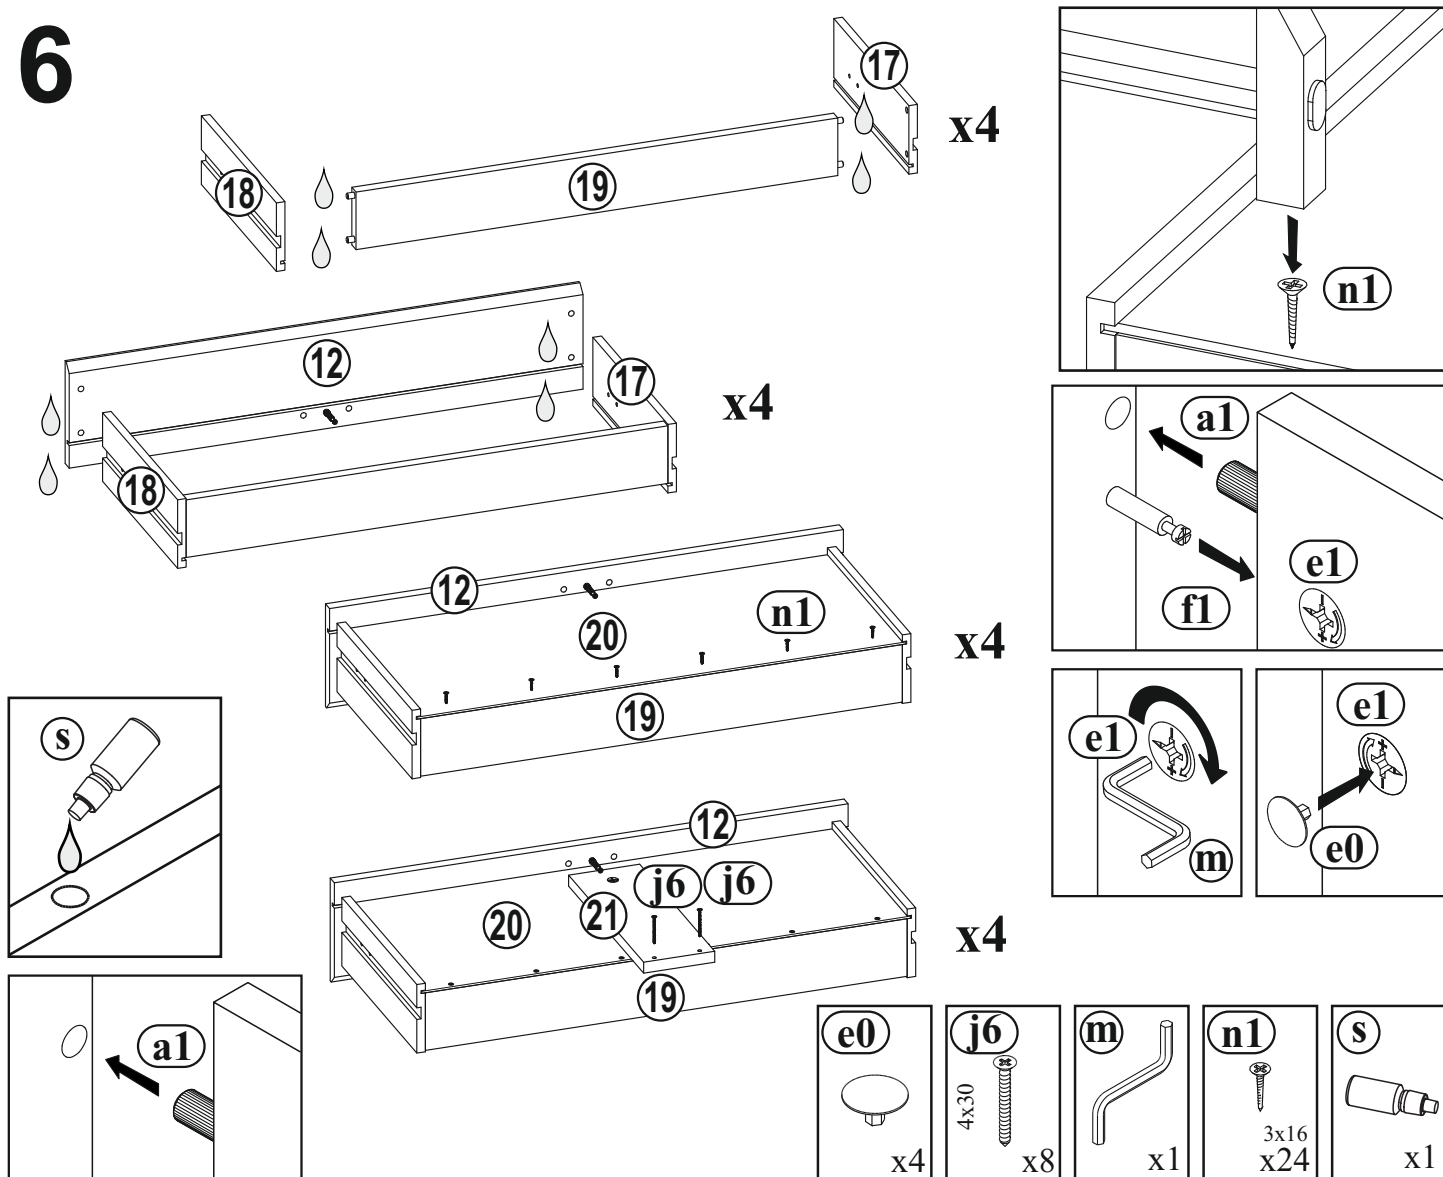









7

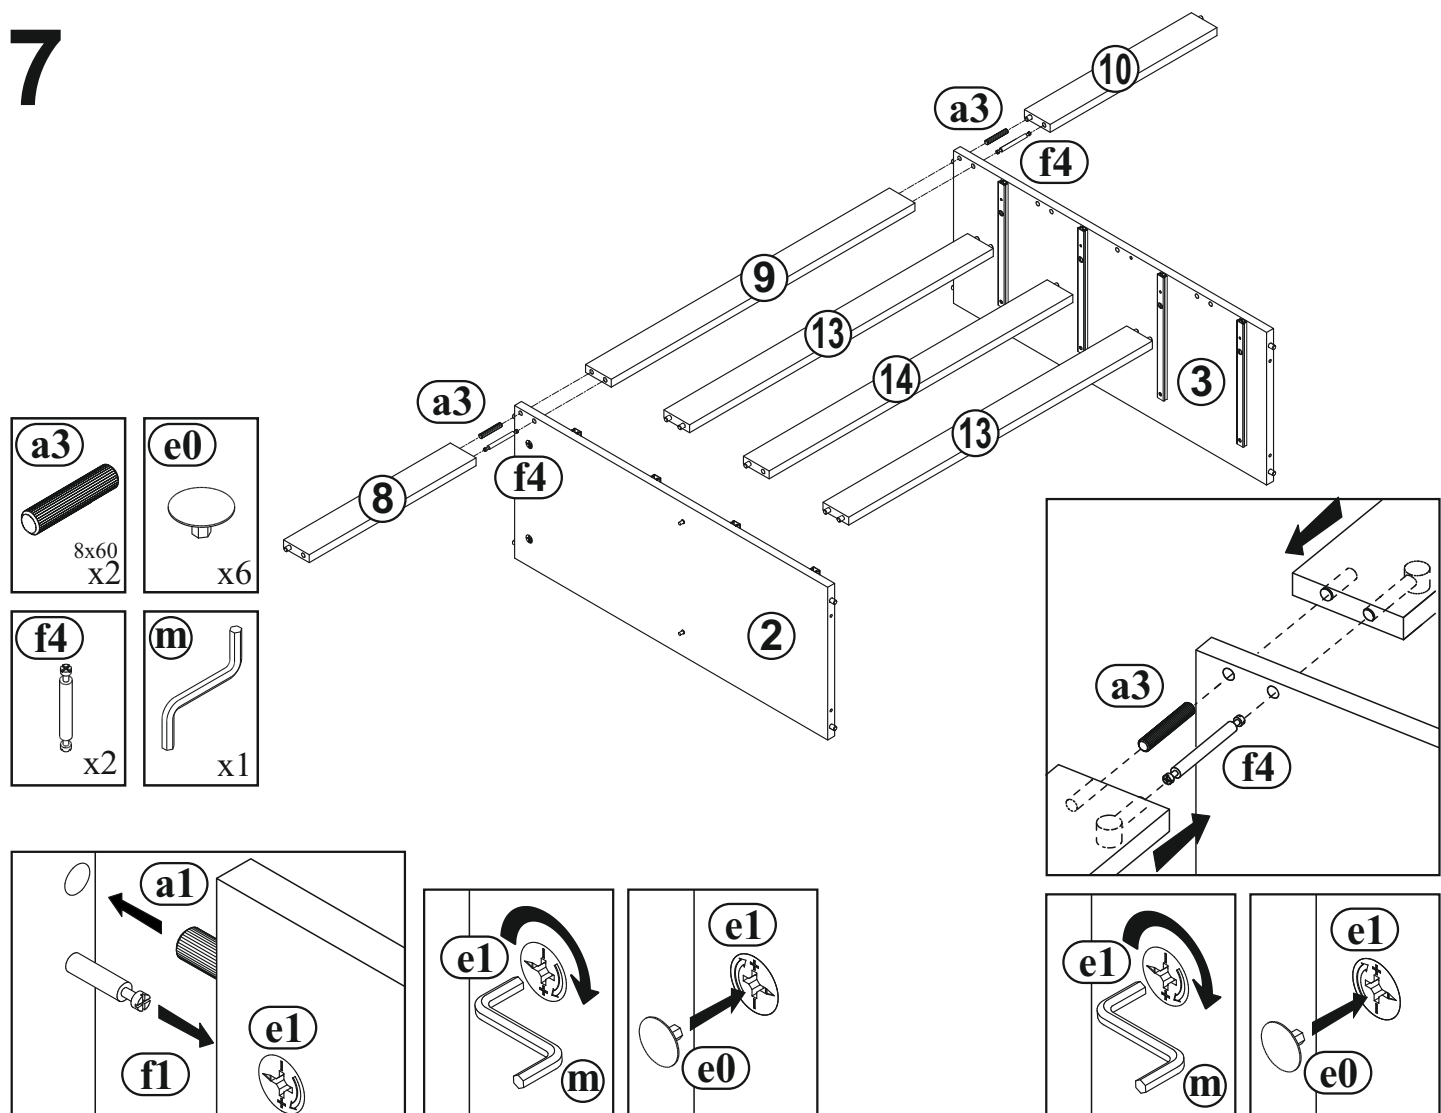







8

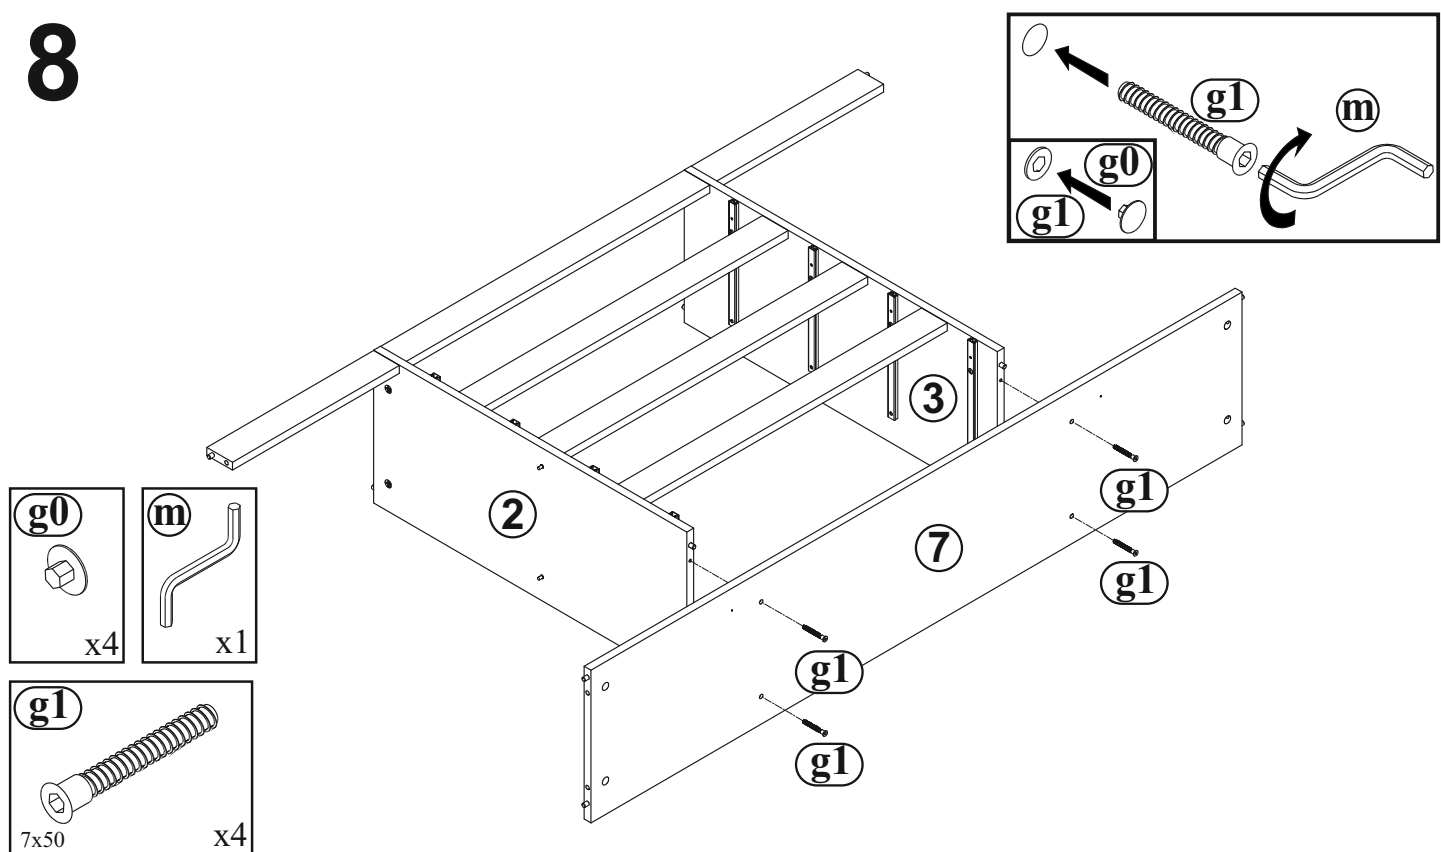








9

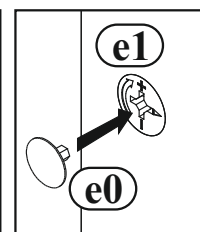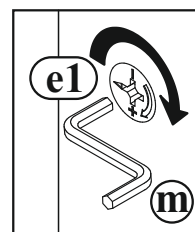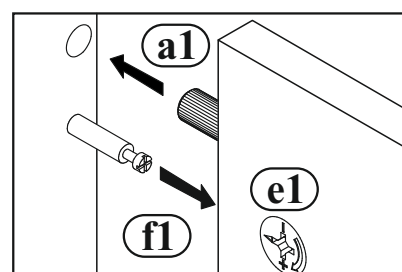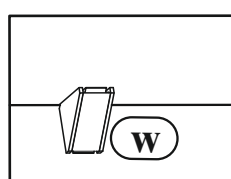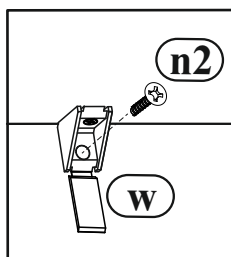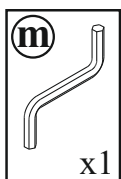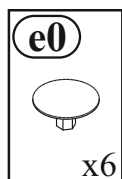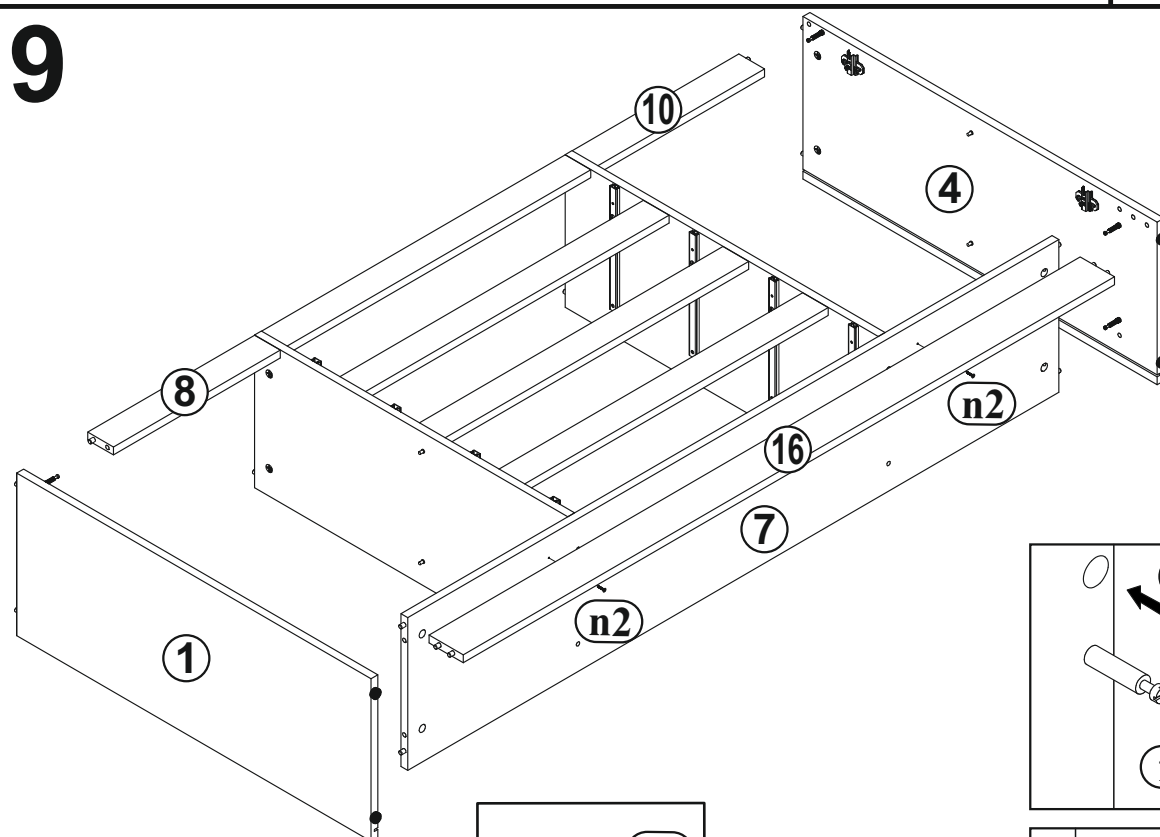

10

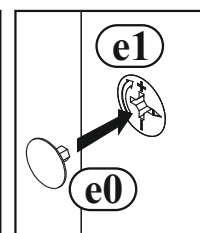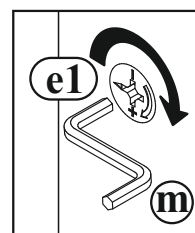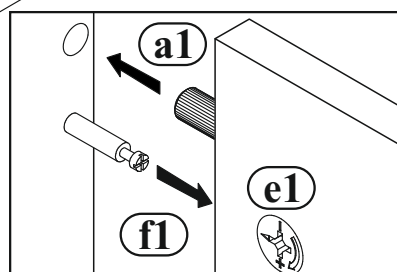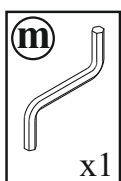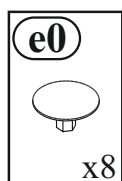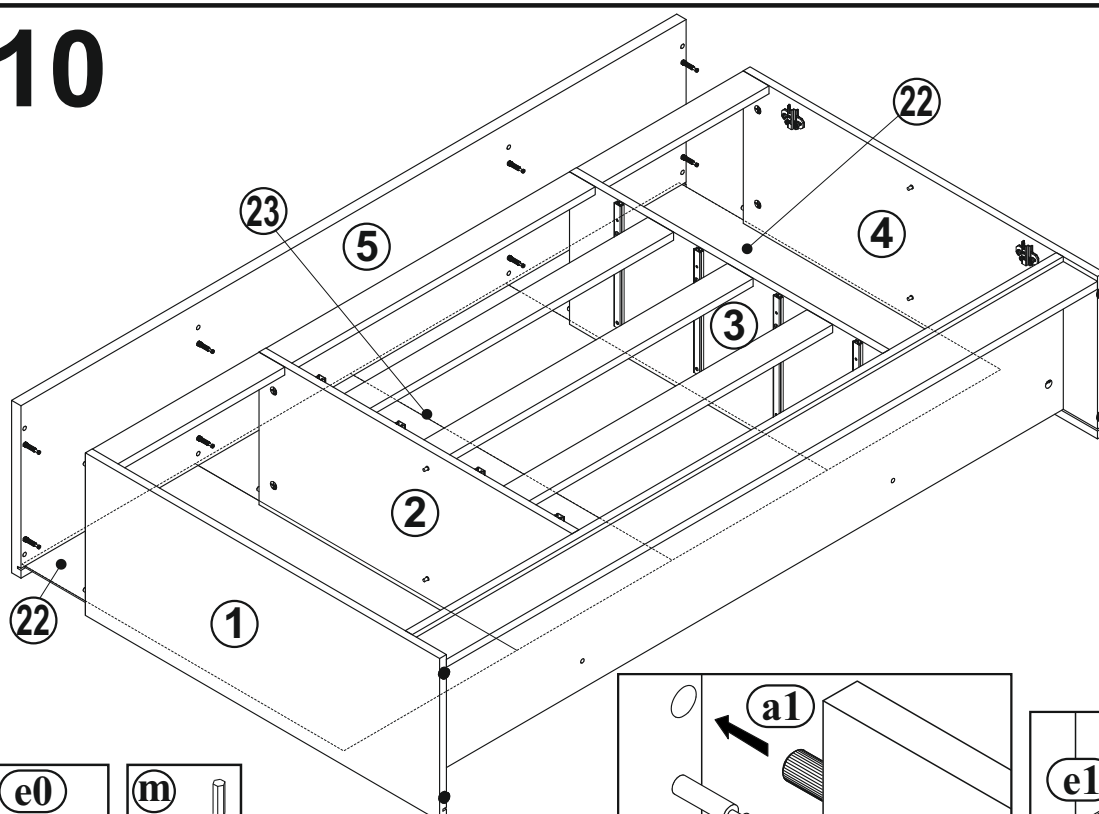

11

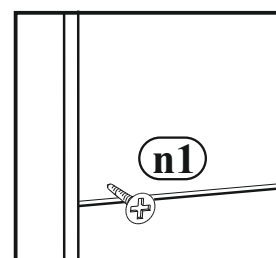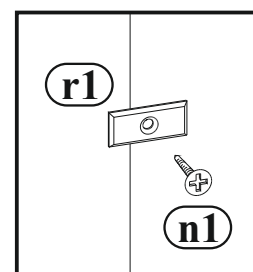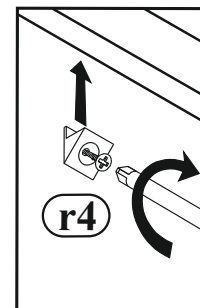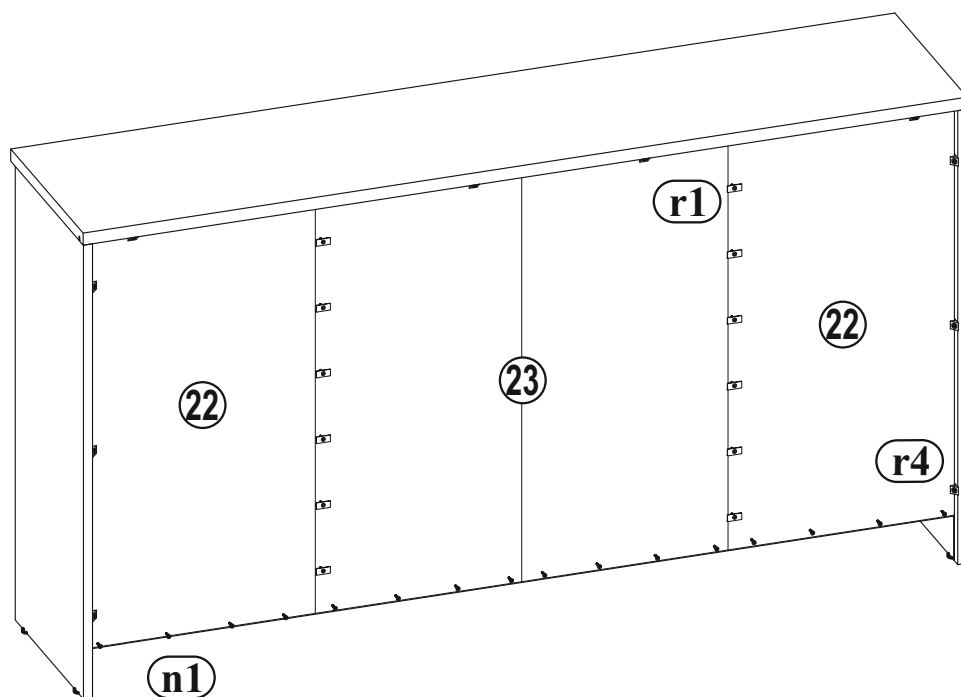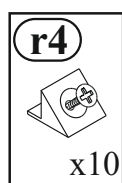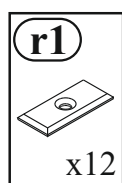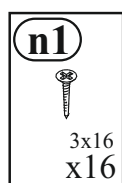

12

